

Smart Distribution Solutions

Coxx LiftBoxx: Logistics outside the Boxx



Loading floor at ground level


Changeable function

Faster (un)loading



## SMART CITY DISTRIBUTION

De LiftBoxx has been specifically developed for urban distribution. A growing lack of space in dense areas increased the need for efficient and flexible transport solutions. The LiftBoxx is available in 3,5 – 5,0 and 6,5 tonne GVW; for driving licenses B, C and C1. The LiftBoxx differentiates itself by its variable load floor height which can drop to ground level. A high load capacity, the easy connect function for various container units and a diversity of applications make the LiftBoxx unique. Several cabin brands are available in several fuel type and drivetrain options.

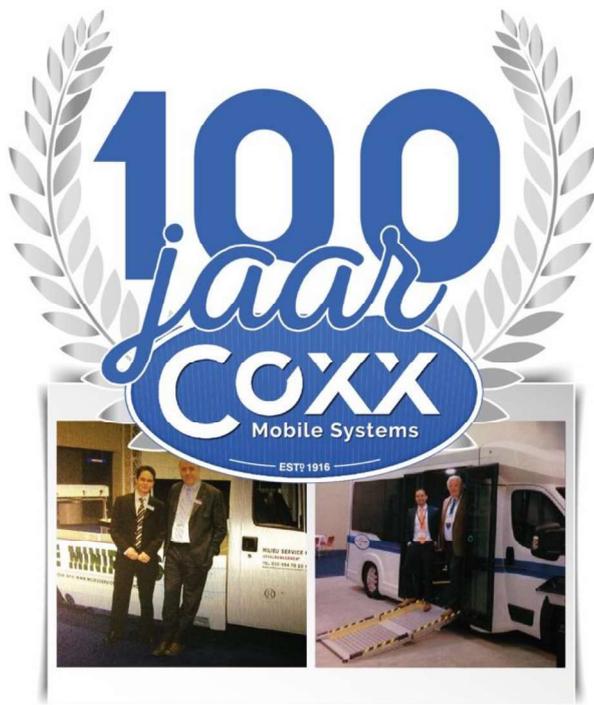

## ABOUT COXX MOBILE SYSTEMS

Coxx Mobile Systems B.V. is manufacturer of smart distribution solutions and light commercial vehicles up to 7,5 tonne GVW. Our lowered floor chassis technology offers innovative solutions for the distribution of both goods and passengers.

100+ years of experience and knowledge contributed to a broad product portfolio focused on various target groups.

Thanks to the modular construction of Coxx' products, innovative and revolutionary solutions can be offered both customized and produced in larger series. In addition to the innovative and quality products, Coxx highly values personalized and adequate service.

## GROUND LEVEL LOADING FLOOR

Direct access without any steps. The LiftBoxx drops down its floor down to ground level. On even the smallest wheels any cargo up to 4.500 mm rolls easily in. Unloading comes with the same ease and ergonomic advantages.



## FASTER (UN)LOADING

Tail lifts are now in the past. Experience faster loading and unloading with the Roll-on Roll-off (RoRo) principle. The loading floor of the LiftBoxx drops down to ground level within a few seconds. In 25 delivery addresses you save 18% or 1,5 hour per vehicle, per day with a LiftBoxx. What would you do with the time saved?

## DEMOUNTABLE & CHANGEABLE

No more time wasted at distribution centres. While the LiftBoxx driver is moving cargo, another container can already be loaded for more efficiency and flexibility. The container units can easily be dropped off without leaving the cabin. Within 2 minutes the empty box can be dropped off and the preloaded box can be connected and on its way.



## OUT OF THE BOXX APPLICATIONS

The LiftBoxx can carry a broad variety of Boxx-units. With 3 widths and lengths up to 5.000 mm a lot is possible. From easy transport frames, loading floors, storage containers, horse boxes, slide-out pop-up stores, mobile workspaces, command posts, camping pods, food stalls, locker boxes, ATM units, emergency service units, or various transport units. It all fits inside the LiftBoxx.

# TECHNICAL SPECIFICATIONS

## Coxx LiftBoxx Smart Distribution System

Type	GVW	Load capacity Excl. Boxx	Boxx length	Driving license
XF 35-40	3.500 Kg	1.300 Kg	2.000 till 4.000 mm	B
XF 50-40	5.000 Kg	2.800 Kg	2.000 till 4.500 mm	C / C1
XF 65-40	6.500 Kg	4.100 Kg	3.000 till 5.000 mm	C / C1

## DESIGN YOUR OWN APPLICATIONS

The base of every loading platform or container unit is formed by a self-supporting aluminium floor. The construction on top of the floor frame is up to your purpose and imagination.

By varying the construction it is possible to vary the application of the vehicle. Without changing the vehicle. This makes the LiftBoxx fit for a large number of sectors, each with its own specific wishes and demands.



Coxx Mobile Systems B.V.  
Provinciënbaan 11  
5121 DK Rijen  
The Netherlands

www.coxx.nl  
e-mail: info@coxx.nl  
tel. +31 (0)85 30 30 205